
STRATLOCK SL RANGE

SL-C-WC90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE

SL-C-WC90-FR

HOW TO FIT CONNECTOR to SL-RLE

SL-C-WC90-

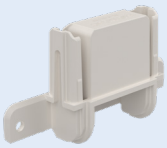


SL-RLE




USE WITH:	INSTALL WITH:
8G panhead self tappers	1/8" drill bit

INSTALLATION STEPS


1 Clip perpendicular SL-RLE onto SL-C-WC90-FR

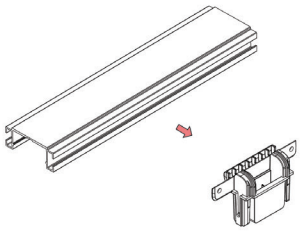


2

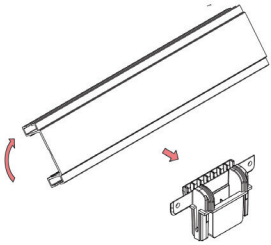

3

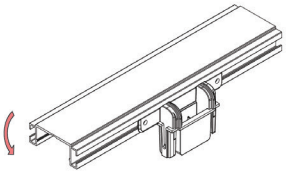


4 Secure SL-RLE in position with 8G self-tapping panhead screws

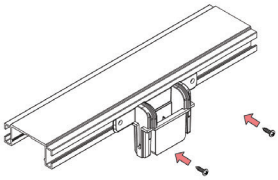


STRATLOCK SL RANGE

SL-C-WC90-FR HOW TO FIT CONNECTOR INSTALLATION GUIDE

5 Slot SL-RLE onto SL-C-WC90-FR

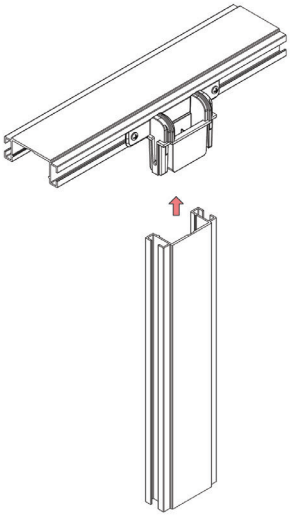

6 Secure SL-RLE in position with 8G self-tapping panhead screws

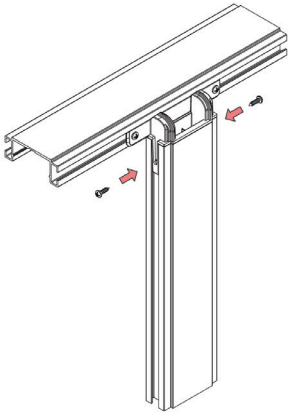

7

